

Eco Desk 3-Pack

3-in-1 Multifunction Pen, Webcam Cover, 4GB Flash Drive



ECO DESK 3-PACK

3-in-1 Multifunction Bamboo Pen



Pen



Stylus

 


Phone Stand


Webcam Cover



1. Remove adhesive tab from magnet.




2. Place magnet next to camera lens and press firmly.

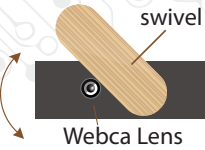

3. Place swivel on magnet and swivel to open and close.

4GB Flash Drive

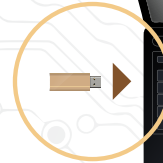

4GB

Eco Desk 3-Pack

3-in-1 Multifunction Pen, Webcam Cover, 4GB Flash Drive

